

# ***POLARIS RANGER PLUG & PLAY REVERSE LIGHT KIT***

***2018 LATE MODEL AND NEWER***



**WARNING: READ ALL DIRECTIONS AND INSTRUCTIONS BEFORE POWERING ANYTHING** Failure to follow directions can result in product warranty void. If you have any Installation questions feel to Message us directly.




1. REMOVE COIL PACK PLUG



2.

REMOVE TWO 10MM BOLTS TO GAIN ACCESS TO THE 5MM ALLEN KEY HEAD SCREW ON THE BOTTOM OF THE BRACKET

INSERT 5MM ALLEN KEY AND REMOVE 10MM NUT ON THE OTHER SIDE. INSTALL RELAY GROUND. REINSTALL 10MM NUT

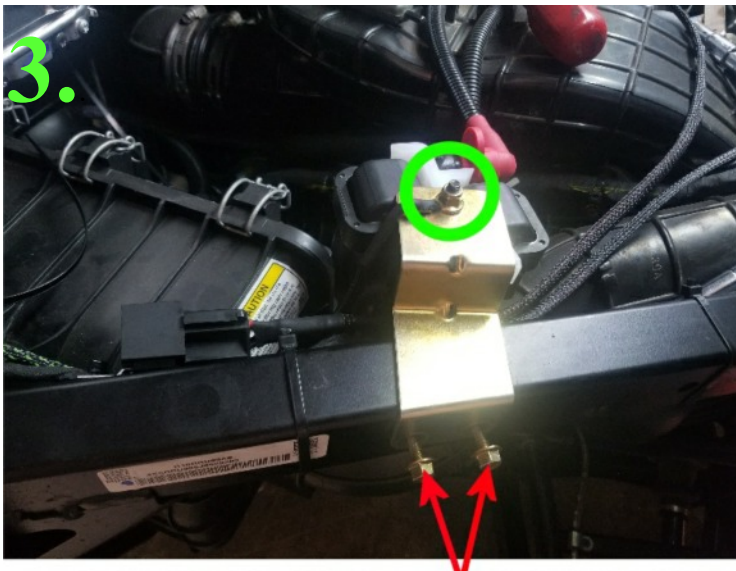


3.

INSTALL BRONZE BRACKET BACK IN ORIGINAL LOCATION. TIGHTEN UP TWO 10MM BOLTS AND REINSTALL COIL PACK CONNECTOR



4.

ZIP TIE RELAY TO THE FRAME AND RUN WIRING UNDERNEATH BRONZE BRACKET TOWARD THE REAR

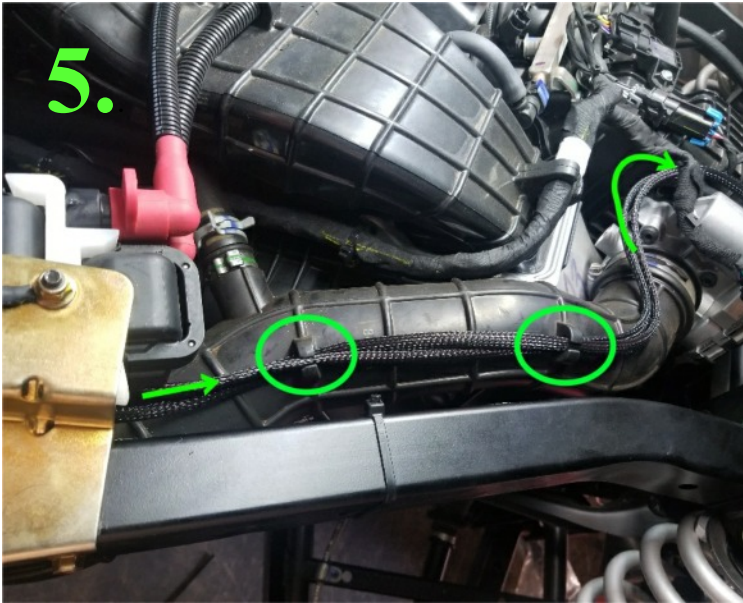

5. RUN WIRING DOWN INTAKE PIPE USING FACTORY WIRE HOLDERS AND ROUTE AROUND THROTTLE



6. LOCATE REVERSE WIRE PLUG AND REMOVE PROTECTIVE COVER.



7. CONNECT REVERSE LIGHT PLUG INTO OEM WIRE CONNECTOR. SECOND PLUG CONNECTS TO LIGHT BAR WHICH IS MOUNT JUST UNDER THE REAR BED.