

Polaris Ranger Reverse Light Relay Kit / Harness Installation Instructions



WARNING: READ ALL DIRECTIONS AND INSTRUCTIONS BEFORE POWERING ANYTHING
Failure to follow directions can result in product warranty void. If you have any Installation questions
feel to Message us directly.

Step 1: Lift the back end and located the two OEM wires next to the throttle body.




Step 2: Using a Razor blade, trim the shrink wrap on the end of connector to expose the wire connection



Step 3: Connect Relay Harness to OEM wires. Red to Red, Black to Black

Step 4: Remove 10mm Bolt and Mount Relay and Relay ground to the frame. See Below Picture.

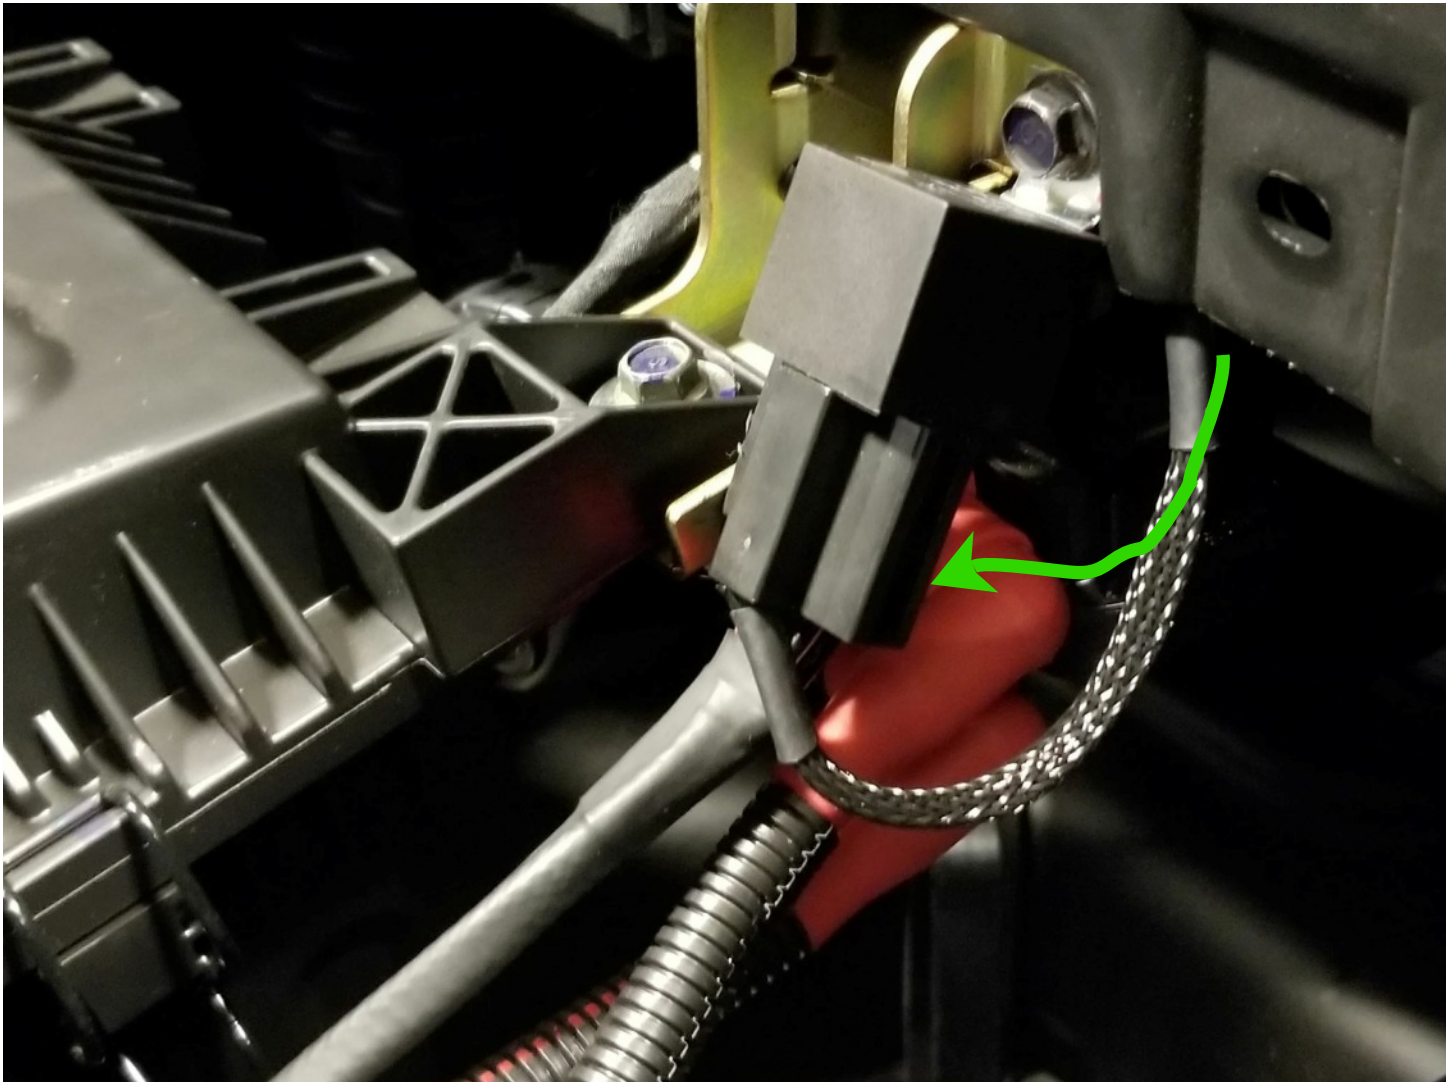

Once installed Bend relay bracket upwards to match picture. This will prevent the relay from rubbing on the red connector

Step 5: Run Relay wiring along side OEM Hoses. Last Connector Runs to the Reverse Light out the rear



Step 6: Mount the Reverse Light LED to the rear Frame below the bed and above the exhaust on select models. Before completion check for clearance between the led and bed as it opens and closes. Attach the supplied brackets temporarily to the LED bar to mark drill holes.

